Stoneridge SE5000 Digital Tachograph Process Guide

Logging in

1. Start the ignition and wait for the vehicle unit to power up. Open the card tray by pressing and holding the desired driver activity button.

2. Slide the driver card into the open card tray chip-side up and with the arrow pointing into the unit. Ensure that the card is sat securely in the tray and not overhanging the lip. Push the drawer closed

© RTITB, 2012. All rights reserved.

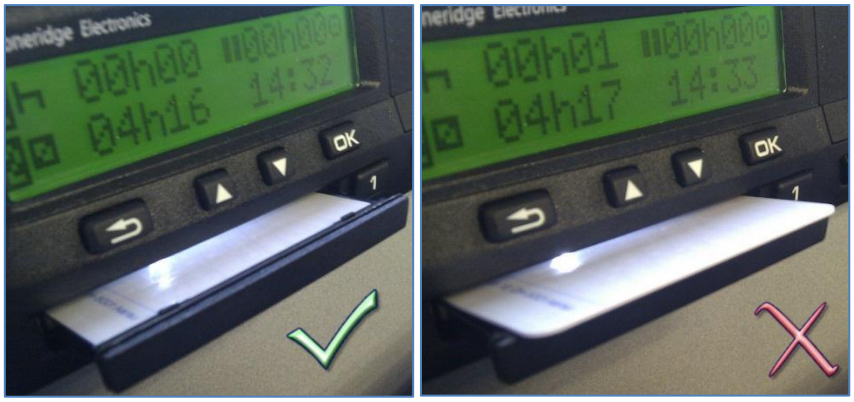

3. The unit will begin to process the card.

4. The driver's name is displayed . . .

5. . . . Followed by the last withdrawal time (in Local Time).

© RTITB, 2012. All rights reserved.

6. Next, the UTC offset is displayed.

7. The driver must confirm whether they have been resting since the card was last withdrawn. In other words, is a manual entry required to log any work activities that occurred after the card was removed? Use the **Up** and **Down** arrows to toggle between 'yes' and 'no'. Press **OK** to make a selection. If 'no' is selected, the driver will be required to enter a manual entry; this process is covered in a separate guide.

© RTITB, 2012. All rights reserved.

8. If the time between card withdrawal and insertion is less than 9 hours, the unit will request a 'beginning country'. Use the **Up** and **Down** buttons to scroll through the list of available countries, and press **OK** to make a selection.

9. The unit will ask whether a printout is required. Press the **Up** and **Down** buttons to toggle between 'yes' and 'no', and press **OK** to make a selection.

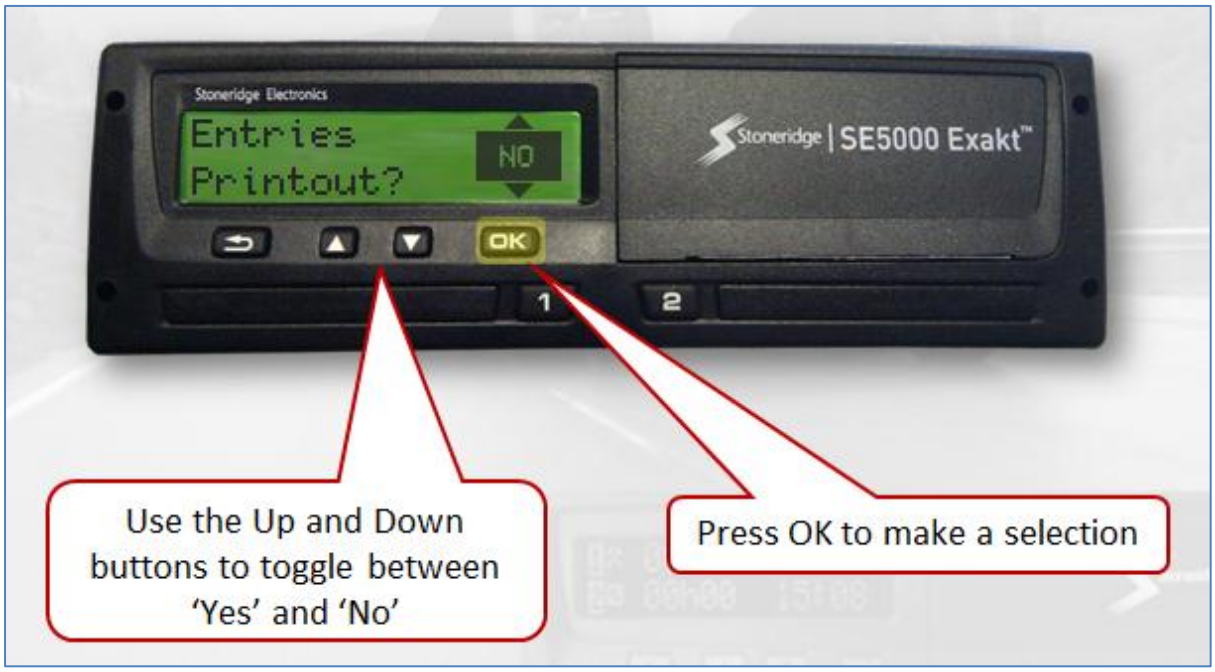

10. Confirm any manual entries that have been entered by pressing the **OK** button.

© RTITB, 2012. All rights reserved.

11. Login procedure is complete.

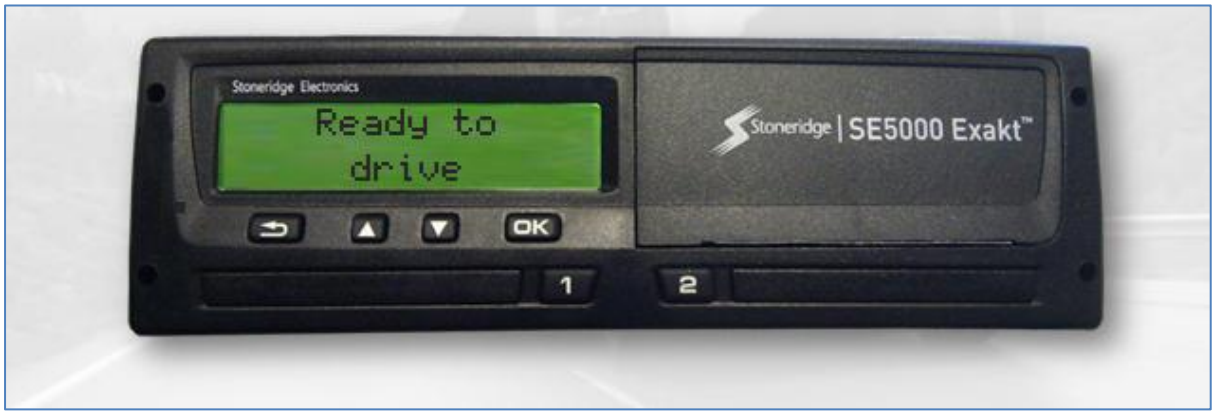

© RTITB, 2012. All rights reserved.